

JBC



AL-2A 焊台

本手册由广东拓利电子科技有限公司进行翻译处理

扫一扫



AL-2A /1A /9A
主机



AL-SD
手柄座



0008745
支架



电源线



AL250-B
焊接手柄



预组装: 0002401

引导件-送锡管
(Ø0,9-Ø1mm solder wire)



C250403
烙铁头



OPTIONAL GUIDE SETS
(NOT SUPPLIED):
0002399 Ø0,4-Ø0,5mm
0002402 Ø0,6-Ø0,8mm
0002843 Ø1,1-Ø1,5mm

CL9885
烙铁头清洁器



手册



CL6217
毛刷



手册



S0354
海绵



手册




热能管理

JBC 焊台能智能地调节温度


工作模式: 当工具拿离支架时, 烙铁头便能够自动升温到设定的温度。

睡眠模式: 当工具放回支架中, 温度会自动下降到 180° /360°


休眠模式: 当长时间不工作时 (预设 30 分钟), 热量会逐渐减少, 工具最终冷却到与室温相同。

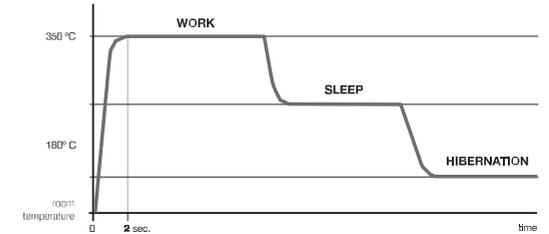

安装/装置

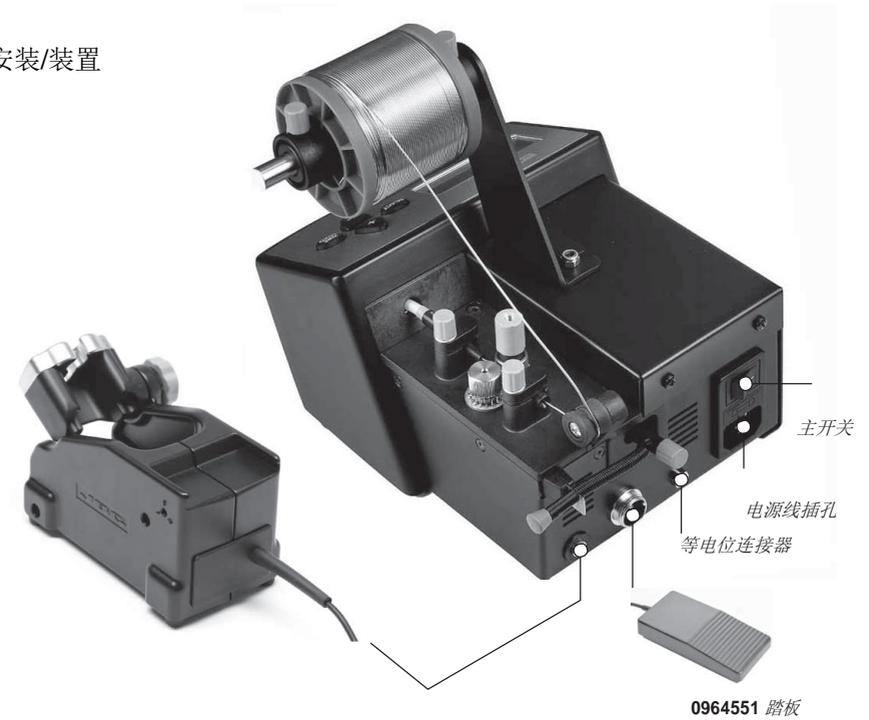


卷轴支架组架

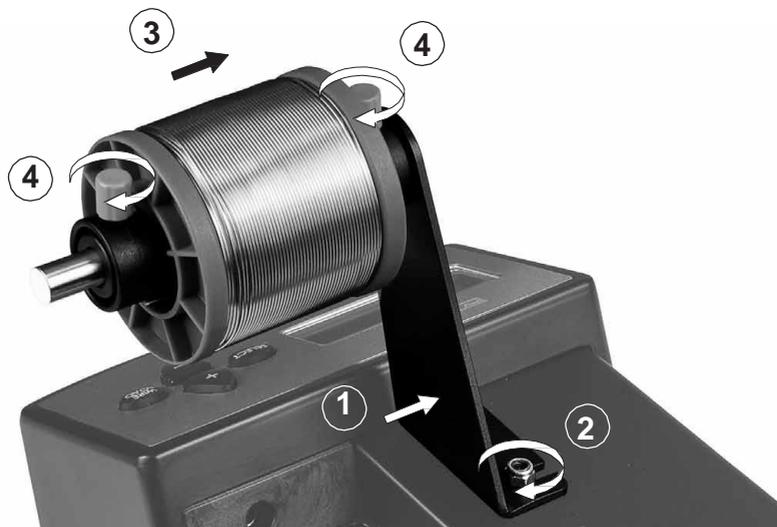

3.

导筒开始工作之前先将焊丝从卷轴取下穿入导筒

4. 旋紧旋钮

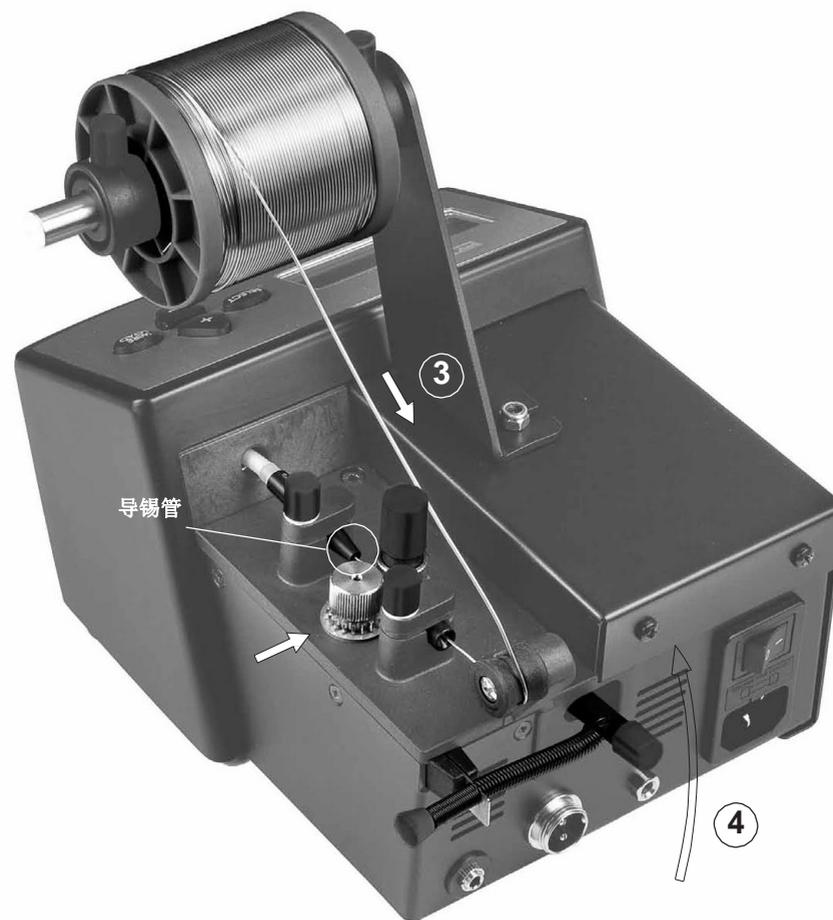

引导件组装




1. 打开拖动机构

2. 安装引导装置和拧紧螺丝

5.

手柄连接到工作站后，打开开关，当锡料结束离开导筒后，拿开手柄，最后按下 wire load 开关,直到焊料离开由导向管的端部。

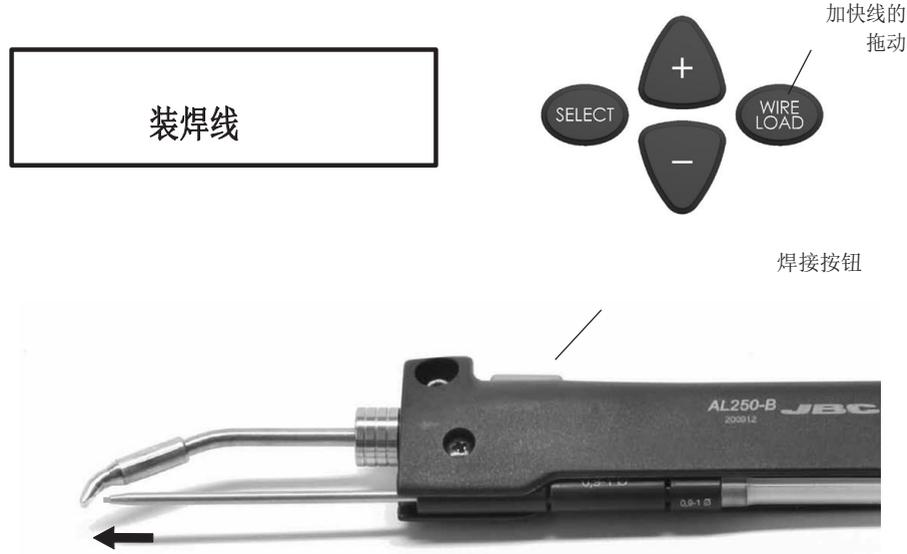

离合器调节




A. 调整拖动强度，以便焊线转动，避免失速或者任何原因引起的堵塞情况

B. 强化拖动机制

控制屏幕

工具温度

工具状态

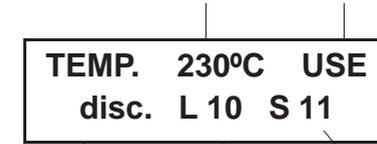

四种工作状态

工作模式

电线长度


速度

USE (Use): 该工具准备工作

STD (stand): 该工具被放在支架上，但仍未进入睡眠模式


SLP (sleep): 该工具已经进入睡眠模式，其温度已经下降到睡眠温度


OL.: 电源电路过热，暂时不提供电源

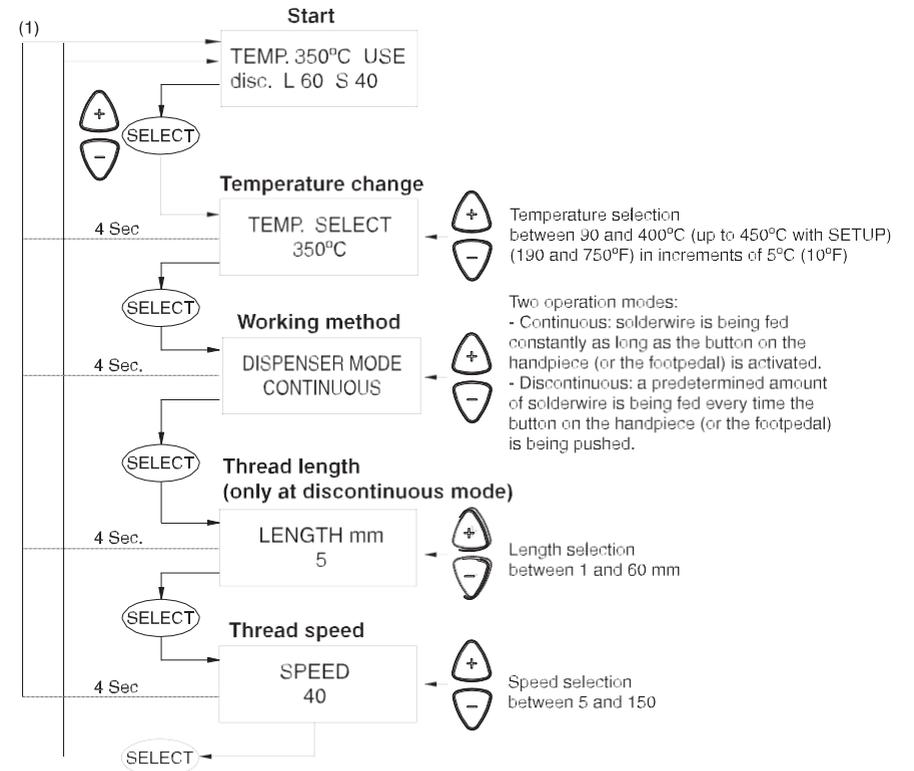

(1) After 4 seconds without pushing buttons, initial screen will be displayed.

工具和工作站的修改和设置 要进入该模式，则必须按住选择键3秒

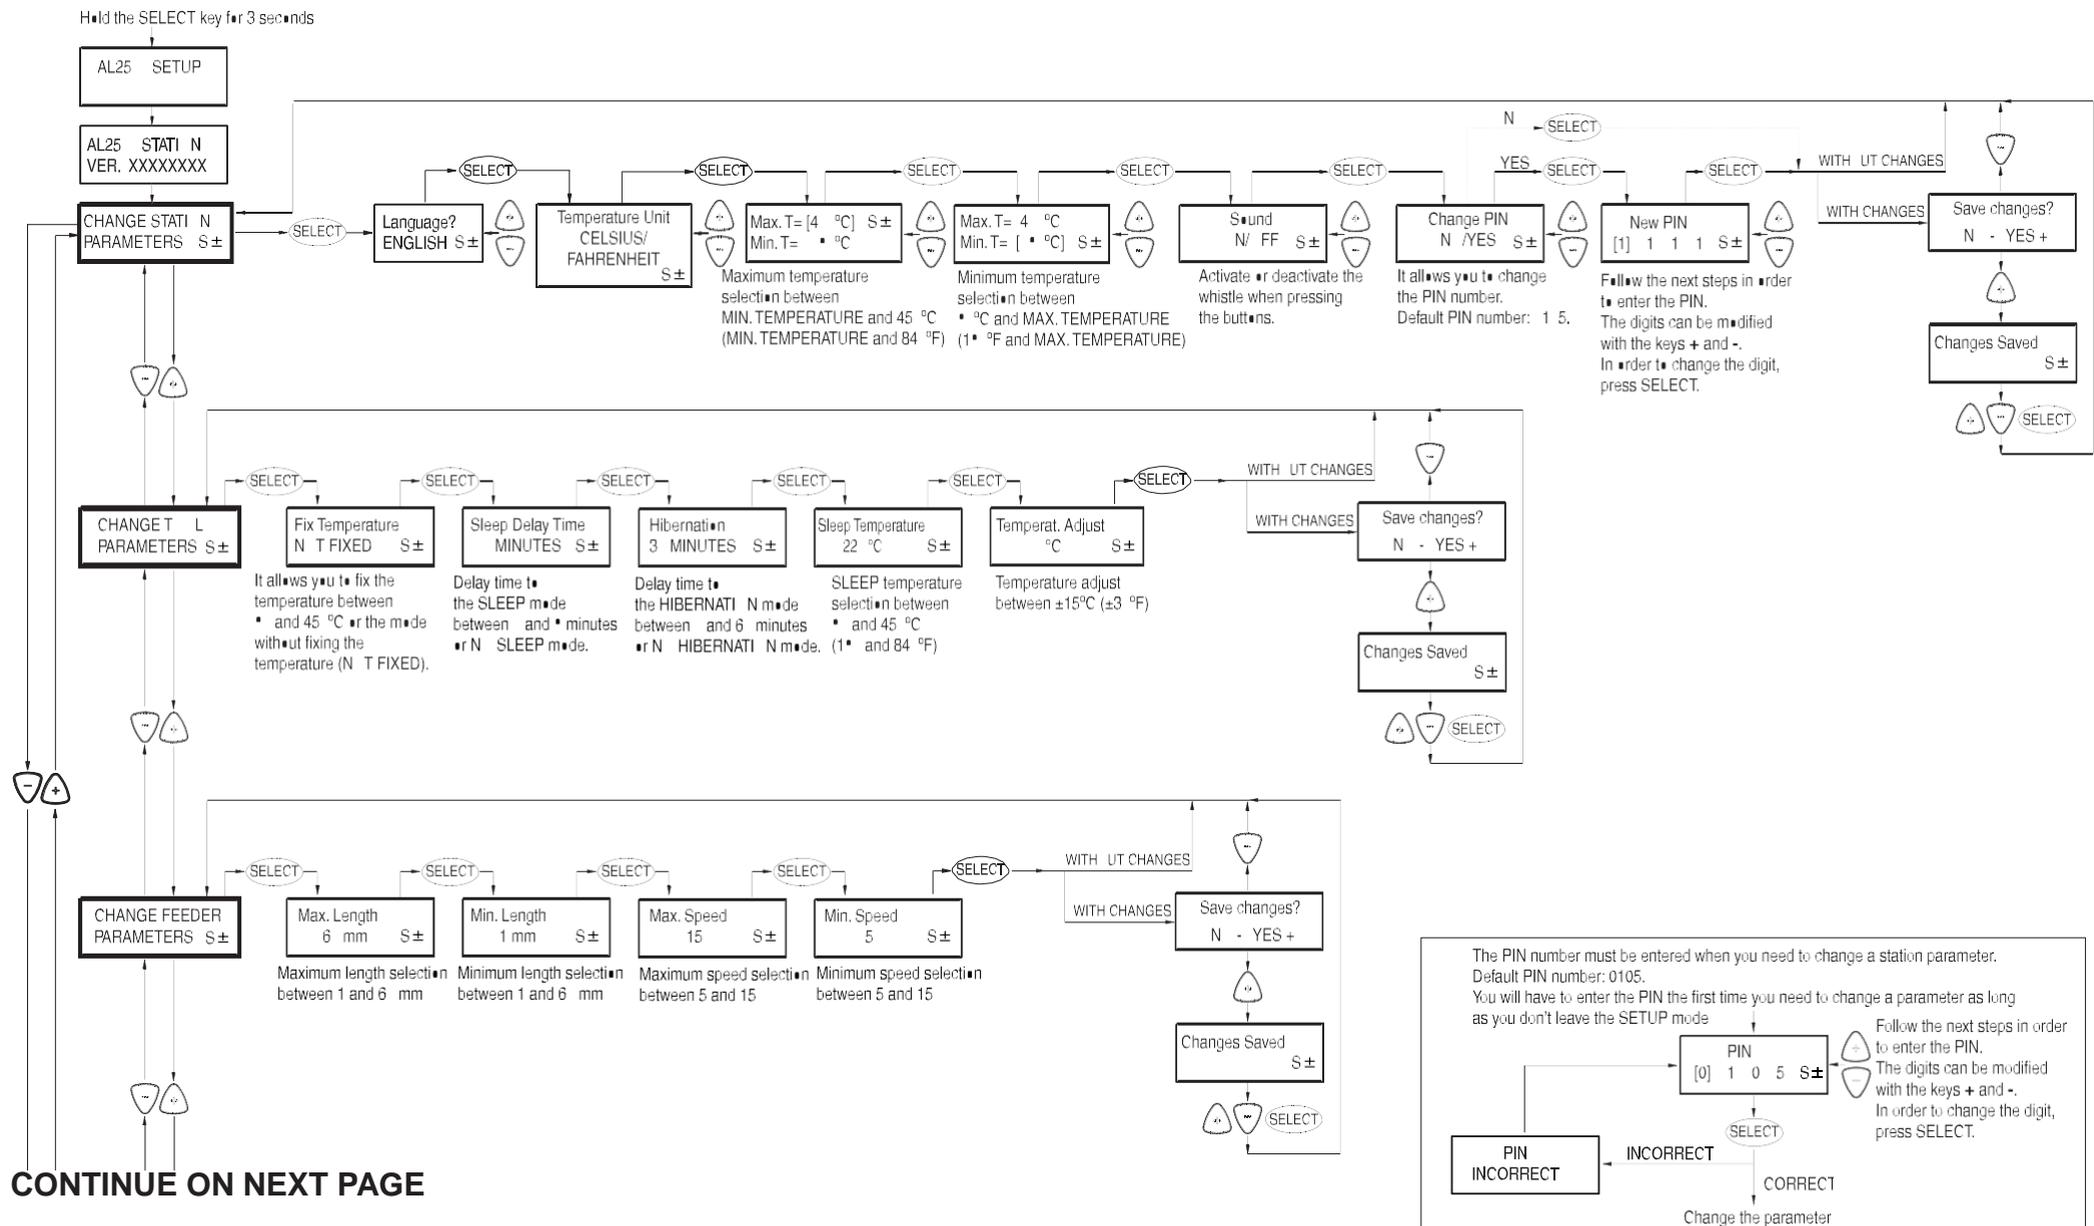

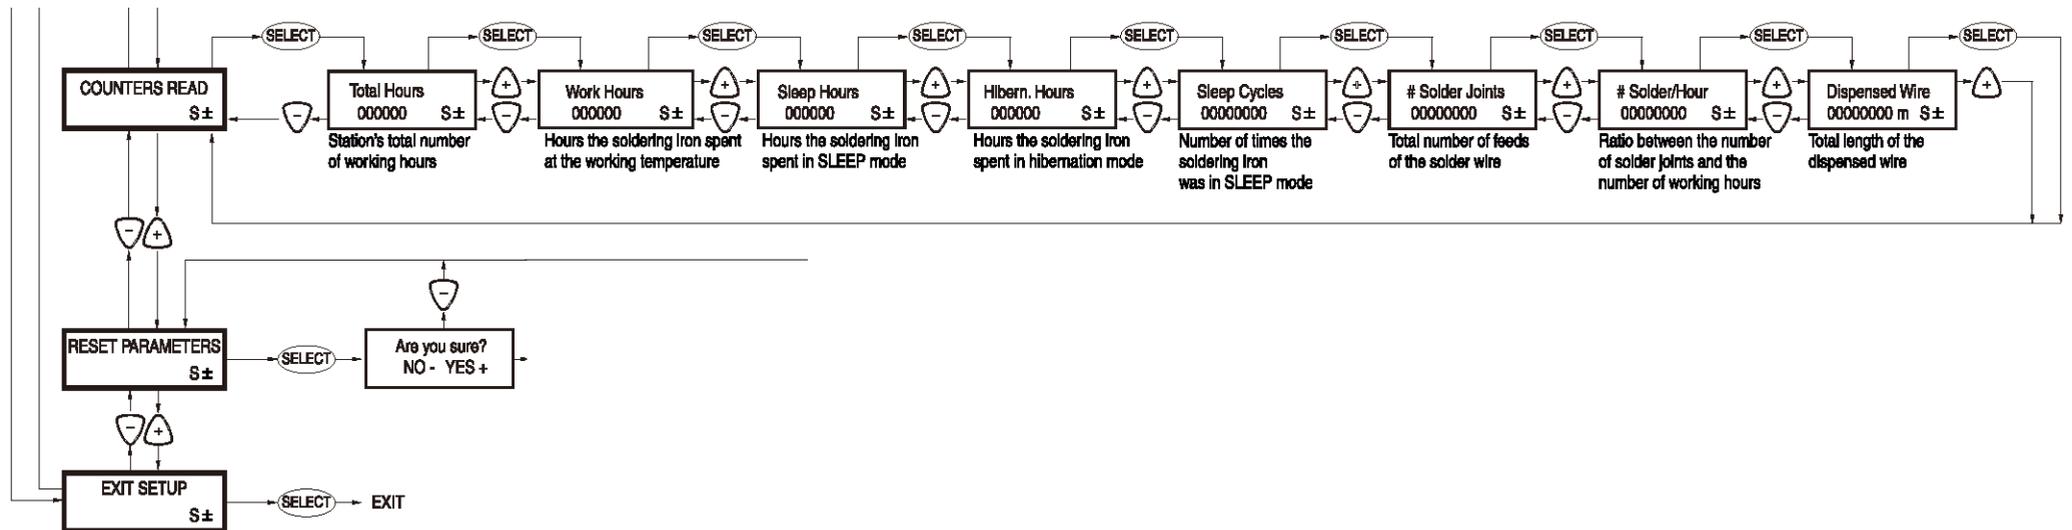

TECHNICAL SPECIFICATIONS

- Temperature selection from 90°C (190°F) to 450°C (840°F) (±5%)
- Power: 130W
- safety transformer, mains separator and double isolation, with temperature protection fuse
- **AL-2A** 230V 50/60Hz. Input fuse: 1A. output: 23.5V
- **AL-1A** 120V 50/60Hz. Input fuse: 2A. output: 23.5V
- **AL-9A** 100V 50/60Hz. Input fuse: 2A. output: 23.5V
- Total weight: 5.8 kg (12.9 lb)
- Complies with Ce standards on electrical safety, electromagnetic compatibility and esd protected housing "skin effect"
- roHs compliant
- equipotential connector and the tool tip are connected to station mains ground supply for esd protection



This product should not be
thrown in the garbage.

JBC

WARRANTY

JBC's 2 years warranty guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.

serIAI N°

sTAMP of deAler

dATe of PURCHase



0008879-0213